

Proprietary prefabricated panel system



We do the hard work off-site so your toilet building construction on-site is faster, more accurate and cost effective.



**30% faster
to install than
other systems**



**Accurate,
reduced site
issues**



**Save on costs
with fast and
easy install**

With our unique proprietary prefabricated panel system, your building comes delivered in panels, which are pre-clad both sides and doors pre-hung. The bolt together construction is fast, accurate and no specialist installation team is required – you can engage a local carpenter to put it up with all technical information supplied and expert support only a call away.

Be wary of other systems sold as 'prefab kit-form' that arrive on site essentially as a bundle of separate materials.


We supply all detailed construction documentation and provide on-call expert technical support from planning all the way through to installation of your toilet building to make it easy.

Installation in three simple steps

Upon commencement of project, a full set of construction documentation is provided, including concrete, plumbing, electrical and engineering plans. We're on hand to support you and your trades in planning and delivering the install scope.


Step 1 - Erect wall panels

Mark out, drill holes in slab for panel joiner columns. Bolt first channel into place, attach first panel and repeat until all pre-finished walls are in place.

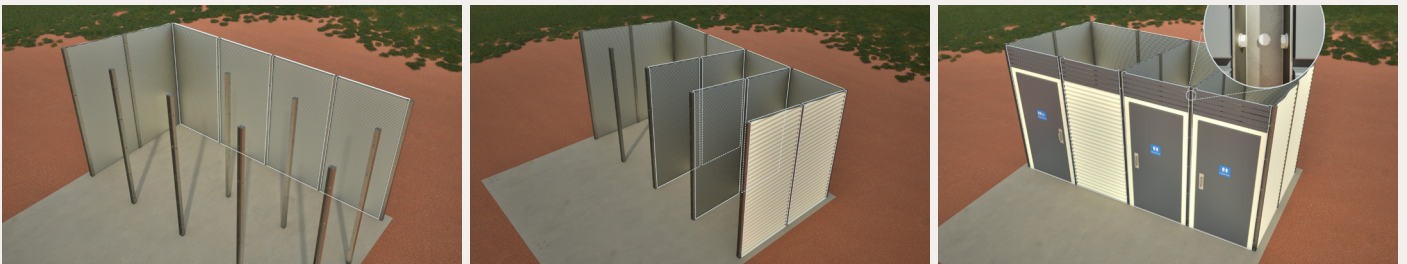

Step 2 - Install roof

Bolt purlins in place to top of joiner columns into prefitted thread inserts in purlins. Attach rafters to purlin ends into thread inserts. Fit verandah columns, bolting to concrete pad. Fit roof sheets to purlins.

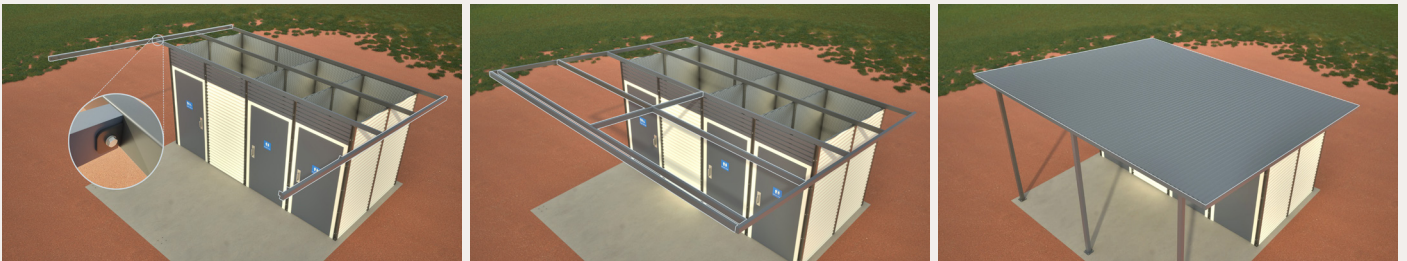

Step 3 - Fit external trims and internal fixtures

Fit external trims to roof, building corners and panel joins to complete the building. Install internal fixtures. Your building is complete and ready to use!

